



# Sony Cyber-shot DSC-T1 LCD screen Replacement

This will guide you the necessary steps to replacing the LCD screen.

Written By: Paul Elrich



## INTRODUCTION

The LCD screen is an essential components to the camera that will allow view-back of images. It is required to first remove the battery, the CCD black plastic housing, and the motherboard to access the LCD screen.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Battery



- Locate the cover on the bottom of the camera.
- Slide the cover towards the back of the camera.

⚠ Be careful, the battery can slide out on its own.


## Step 2

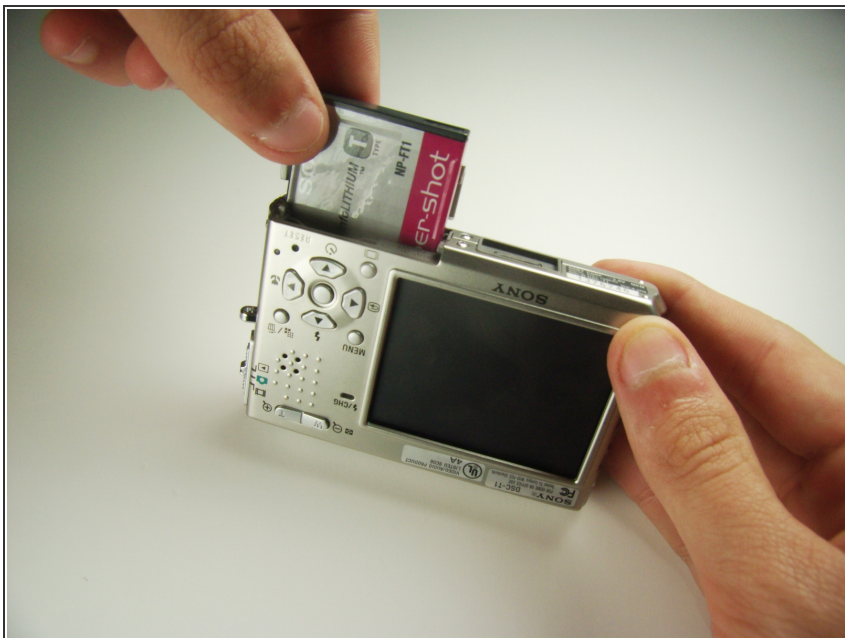

- Carefully remove the exposed battery.
- ⓘ If it is difficult to remove, flip over the camera and the battery will slide out.




## Step 3 — Flash

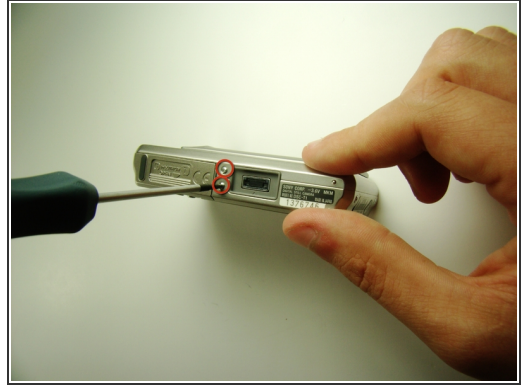

- Locate and remove the 3mm screws on the top and sides of the camera with the size 00 screwdriver.


## Step 4

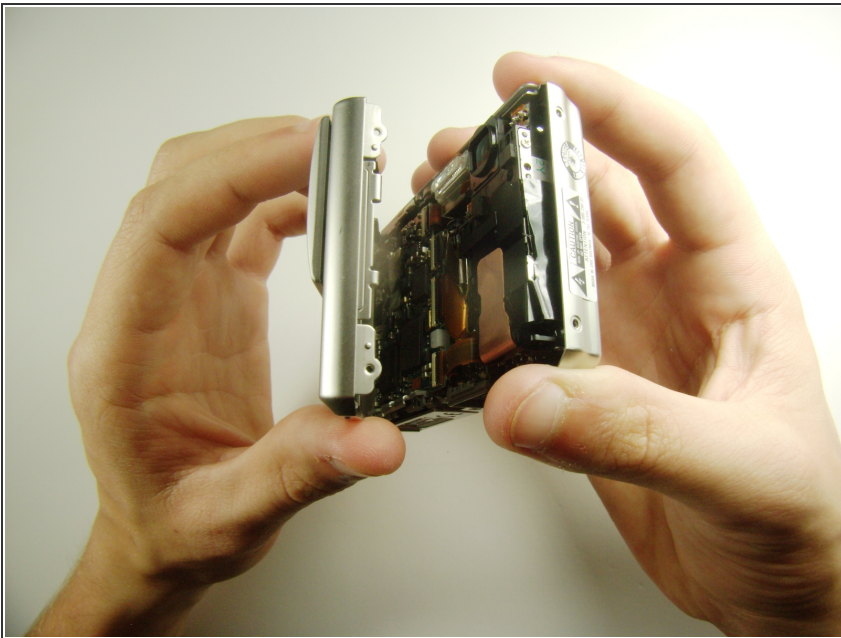

- Pull the two halves of the camera apart.
- Place the two halves down with the insides facing you.




## Step 5

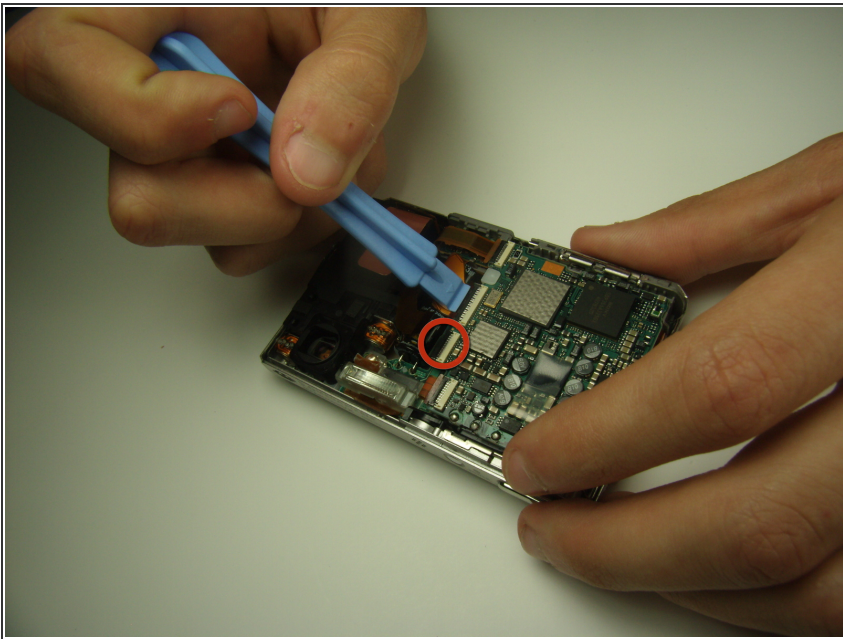



- Find the two clips holding the motherboard to the black lens box.
- Slide the plastic opening tool in between the ribbon and the black part of the clip, then flip it. (If difficult, your fingernail can also be used)

## Step 6

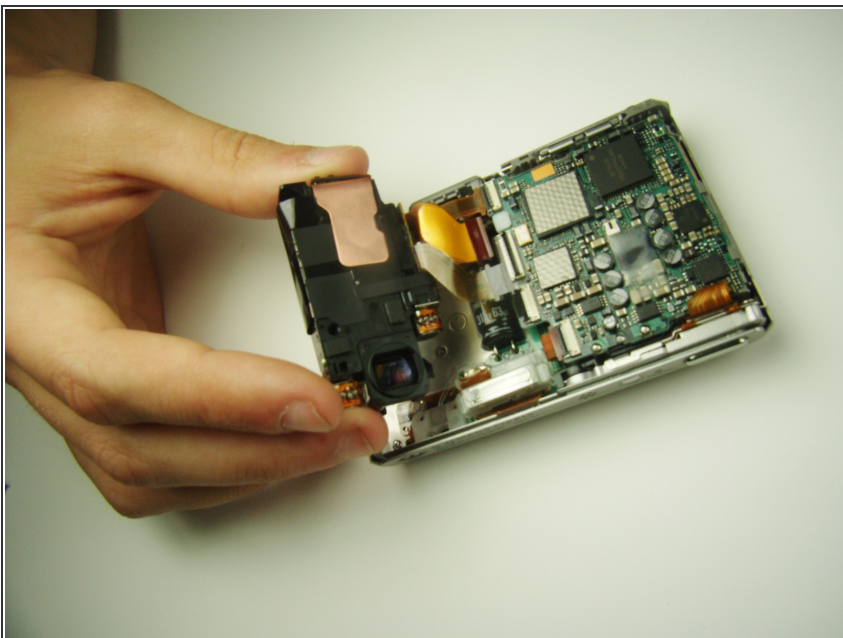



- After releasing the clips, pull out black lens box.

## Step 7

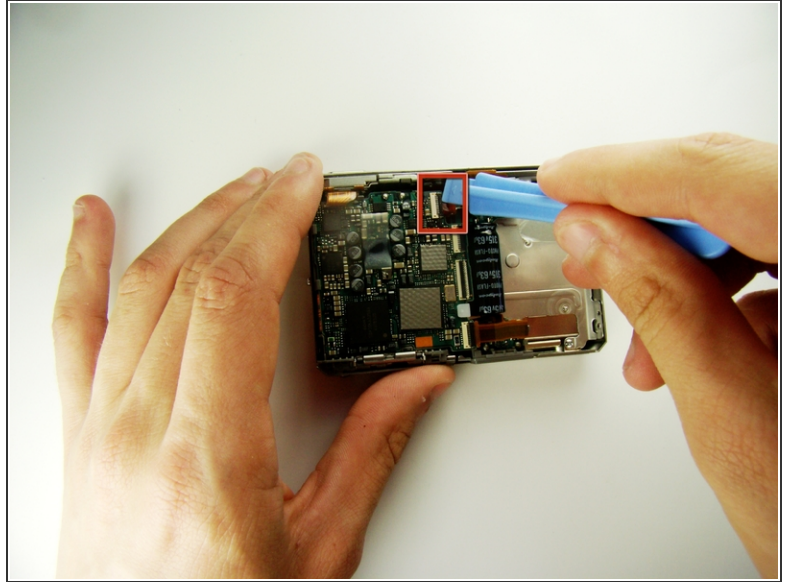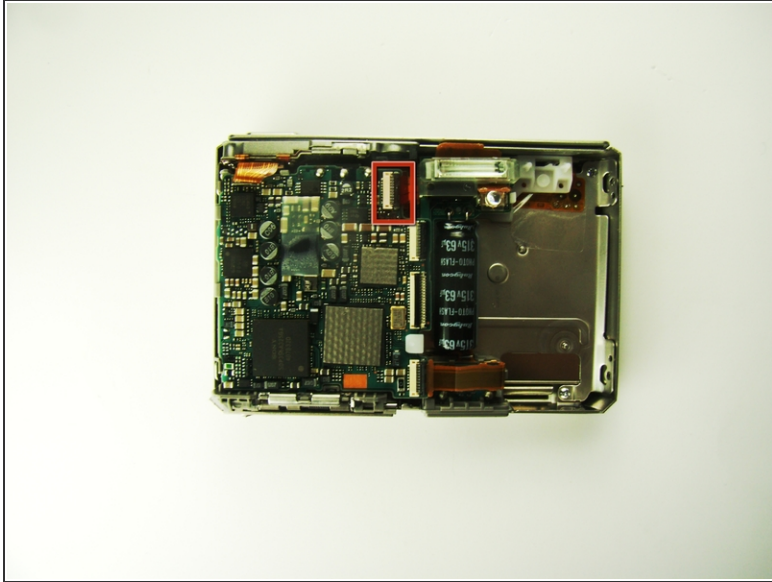

- Use the plastic opening tool to flip the clip.


## Step 8

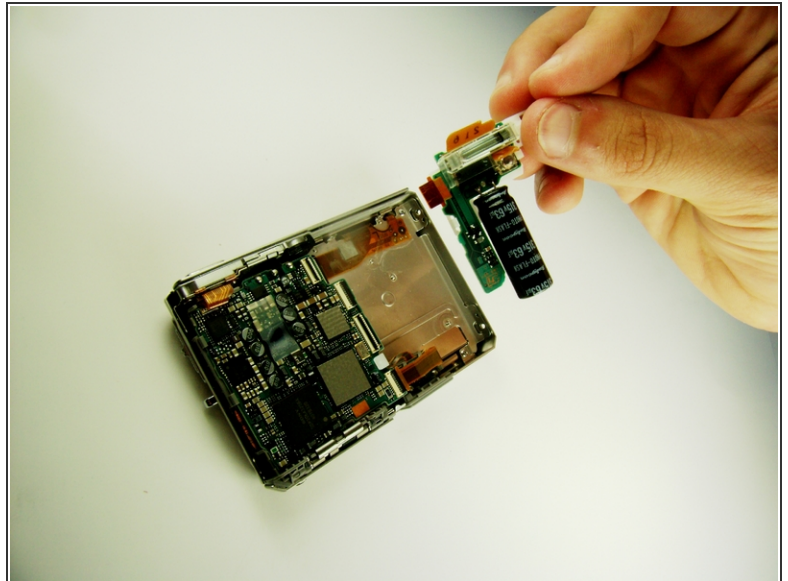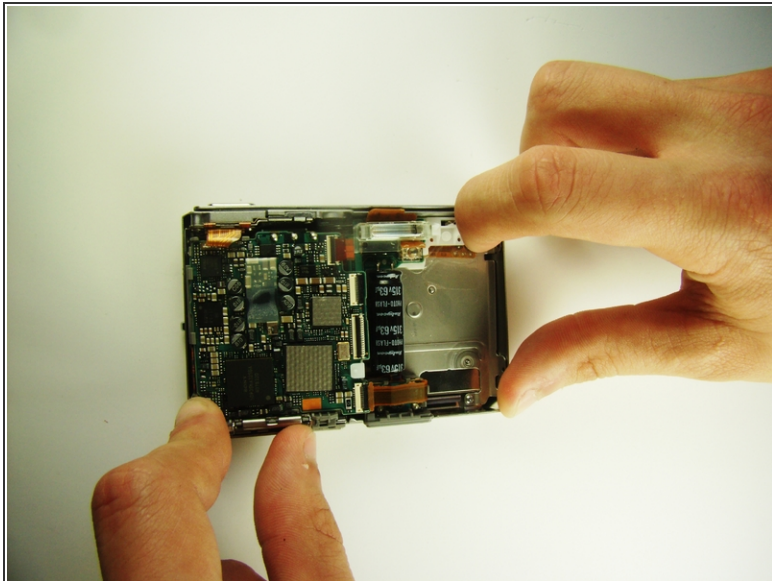

- Grab the white part and slide it to the right until it clicks.
- ⓘ This may require some force.
- Pull out the flash.





## Step 9 — LCD screen

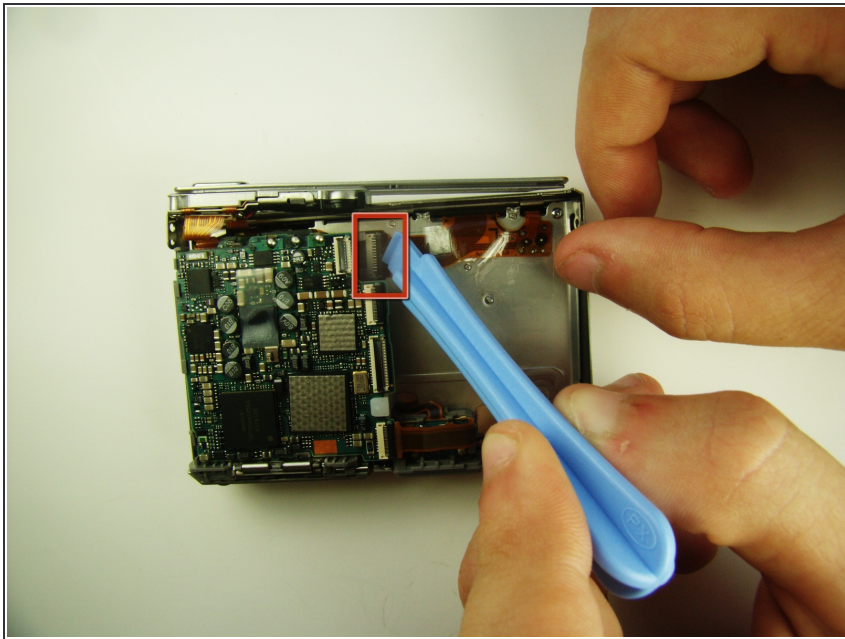

- Use the plastic opening tool to flip the top clip that holds the ribbon to the motherboard unit.


## Step 10

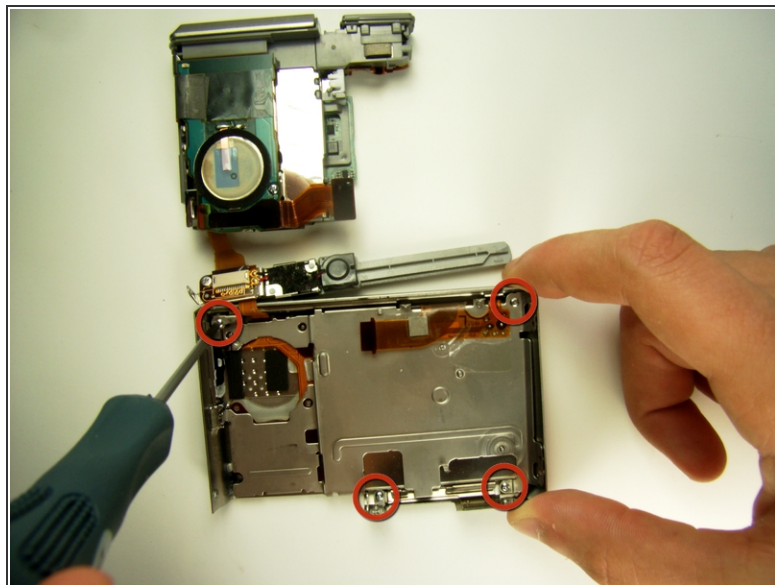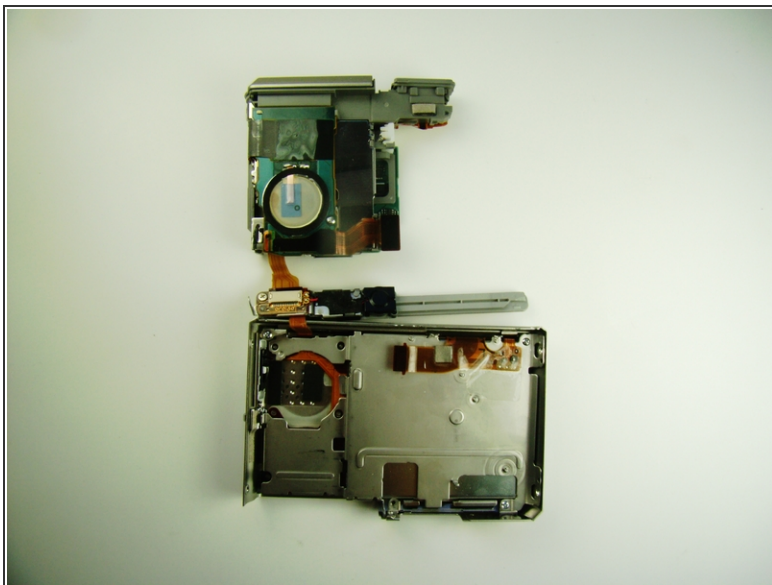

- Flip the motherboard unit up to expose the metal plate beneath it.
- Remove the four 3mm screws shown using the 00 screwdriver.






## Step 11

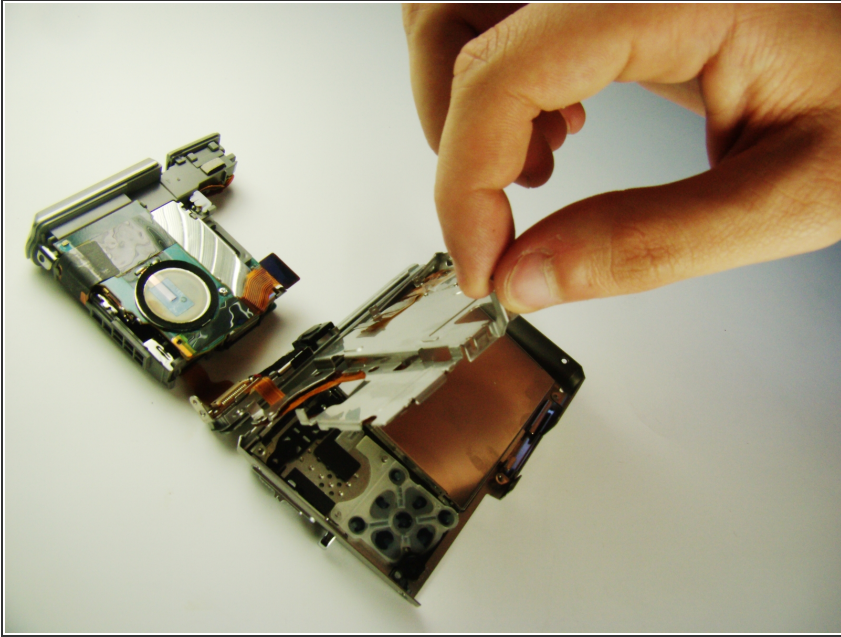

- Lift and remove the metal plate covering the LCD screen from the camera.

## Step 12

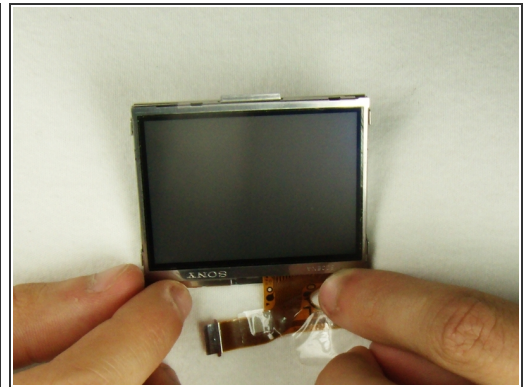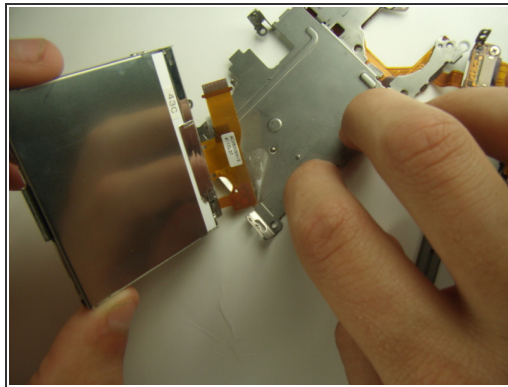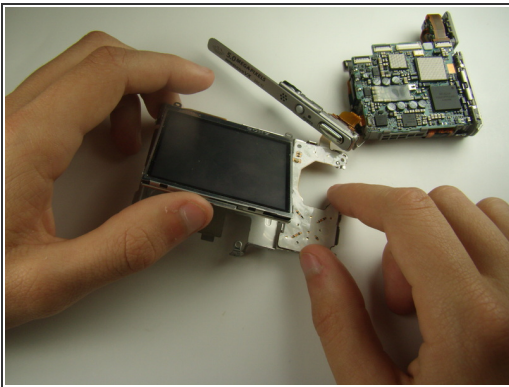

- Flip the LCD over to the other side of the camera.
- Peel the tape connecting the LCD to the camera.
- Remove LCD screen

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-26 01:02:19 AM.